

 
说明书尺寸

宽: 10.5CM

高: 14.5CM

时间:	23.08.21	产品型号:	YG491英
尺寸:	105*145mm		
材质:	105g铜版纸		
工艺:	骑马订		

INSTRUCTION MANUAL

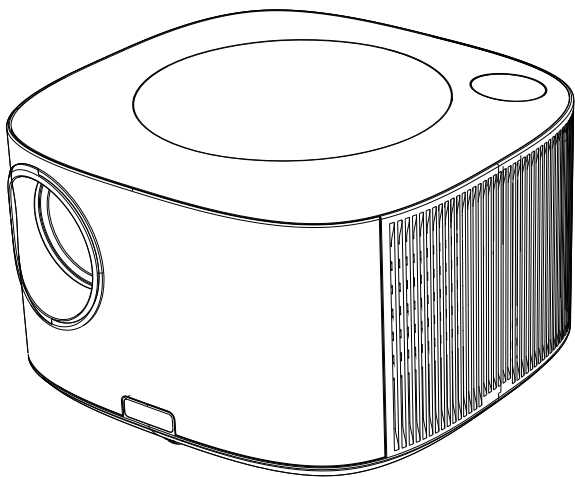

Model: YG491

Please read this manual carefully
before using the projector.

Important Safety Considerations

Attentions:

Thank you for purchasing this series of video projectors.

Please read through this User's manual for proper use of this product.

Friendly Reminder:

- ① Do not look directly into the lens while the projector is running, as strong light may damage your eyes.
- ② Do not block the air outlet to prevent the projector from cooling down because internal electronics are damaged.
- ③ Keep the projector and accessories out of the reach of children.
- ④ Please make sure that the working environment of the projector is dry and ventilated.
- ⑤ To prevent electric shock, please keep the projector out of the rain and away from moisture, It is recommended to switch off the projector after it has run for 6 hours non-stop.
- ⑥ Do not press hard on the projector, as it may damage the product.
- ⑦ Do not throw, hit, or shake the projector to avoid damaging the circuit board.
- ⑧ Any questions after receiving the projector, please contact us, we will quickly and correctly solve your problem within 24 hours and give you a satisfactory answer.

Package contents

 
HDMI cable * 1

Power cord * 1

Remote control * 1


User Manual * 1

Projector description

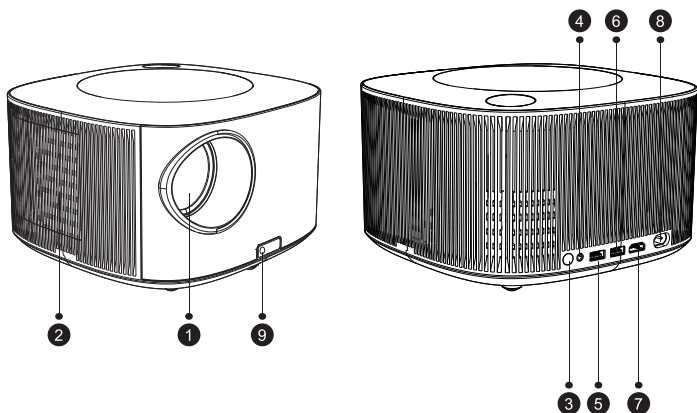

- 1.Lens
- 2.Cooling Window
- 3.IR Receiver
- 4.Headphone Jack
- 5.USB1 Port
- 6.USB2 Port
- 7.HDMI Port
- 8.Power Jack
- 9.Focus camera

 Remote Control Button Function

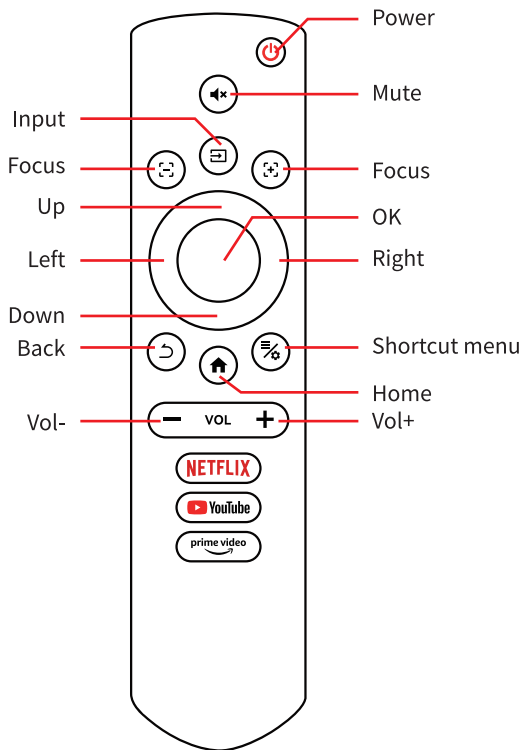

Specification

Imaging technology	TFT LCD
Native resolution	1920*1080
Maximum compatible resolution	1920*1080
Light source	LED Light
Focus mode	Auto focus
Projection distance	1.35-5.7 M
Power input	100-240V~50/60Hz, 2A
Output	Earphone/5V out*1
Speaker	4Ω5W*2
Unit size	224*220*135mm
Net weight	2KG
Projector ratio	1.36:1

Multimedia Supported Formats

Image Format	JPG / PNG / BMP / JPEG
Video Format	MP4 / MKV / WMV / RMVB / RM / AVI / FLV / TRP / VOB / 3GP / DIVX / TP / TS / MPG / M2TS / F4V / DAT
Audio Format	MP3 / AAC / WAV / FLAC / WMA / M4A

 
Power/Focus/KeystoneCorrection

1: Plug the power cord into a power outlet.


2: Press the button “A line drawing of a cylindrical projector with a textured front panel. To its right is a power cord with a standard two-prong electrical plug. The plug is shown inserted into a wall outlet.

Auto Focus


Our projector comes equipped with an auto focus feature. Simply place the projector on a flat surface, and it will automatically adjust the focus for a clear image.

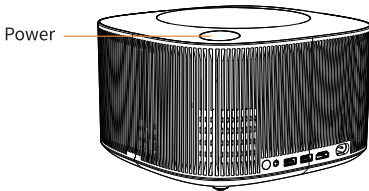


Keystone Correction

On the home page, click the “

 5

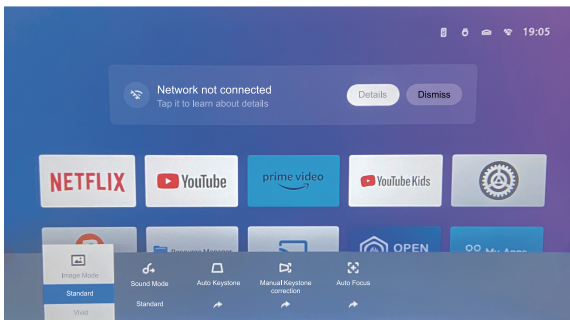

Connection

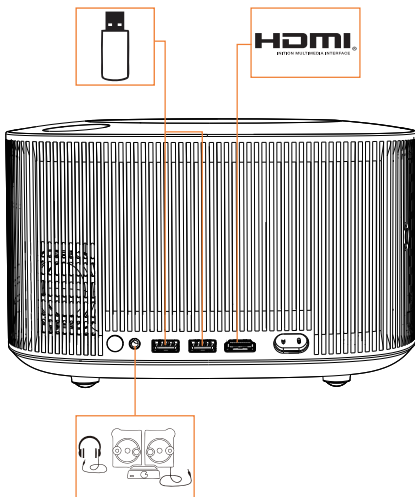 

Add: Different brand laptop output keys are as follows:

Lenovo	Fn+F3
Dell	Fn+F8
HP	Fn+F4
ThinkPad	Fn+F7
Asus	Fn+F8
Acer	Fn+F5
Samsung	Fn+F4
Sony	Fn+F7


Fujitsu	Fn+F10
Haier	Fn+F3
NEC	Fn+F3
Panasonic	Fn+F3
Sharp	Fn+F5
Hitachi	Fn+F7
TOSHIBA	Fn+F5

The user of windows 7 or over windows 7. Simply press the  +P, select “copy” to connect. If the operation above is invalid, Please update the computer graphics driver.

Connecting

1. Connect a USB drive

 Insert the USB flash drive, then click on the USB icon located at the top right corner. This will allow you to access the contents stored in the USB drive, just like the icon's position shown in the image below.

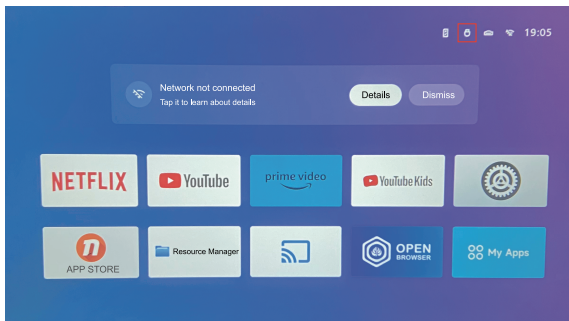


2. Connect 3.5mm audio devices

Support 3.5mm earphones and other cable sound devices.


Bluetooth Settings

Please note: The Bluetooth function is only compatible with audio output devices such as soundbars and Bluetooth speakers.

 
1. Tap on the "Setting" icon on the screen to access the settings options.

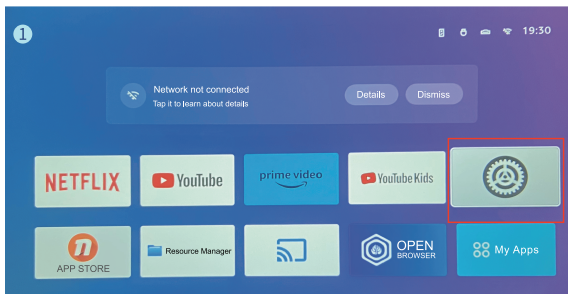

 2. select "Bluetooth" and then click "OK", Choose "Scan Bluetooth Devices" and click "OK".

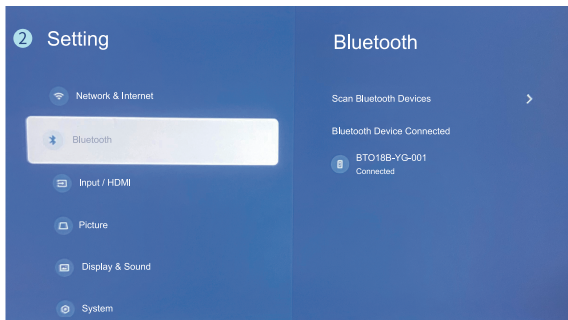

 
3.Now, it will search for Bluetooth speakers.

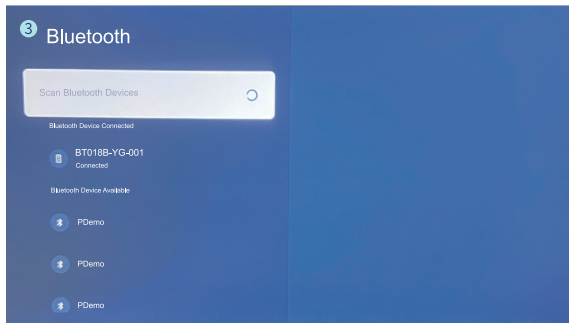

Projector Settings


Please set the option related to "Picture" on this screen
Zoom settings

 1.From the home page, choose "Settings" and then click to enter the settings page.

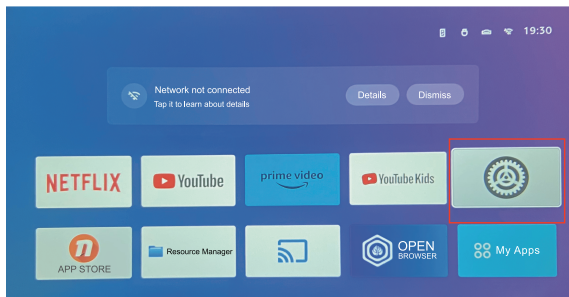


Projector Settings

 2. Navigate to "Picture" in the settings menu, then select "Image Zoom"
To make adjustments, use the left and right buttons on the remote control.

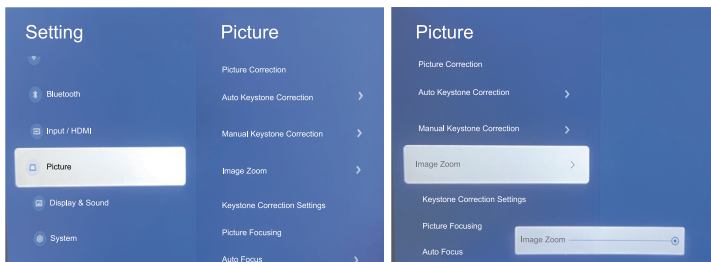

WIFI Setting

 
Click on "Settings" on the screen to enter the settings page. Search for your home network, and then enter the corresponding password to establish the connection, just like shown in the image below.

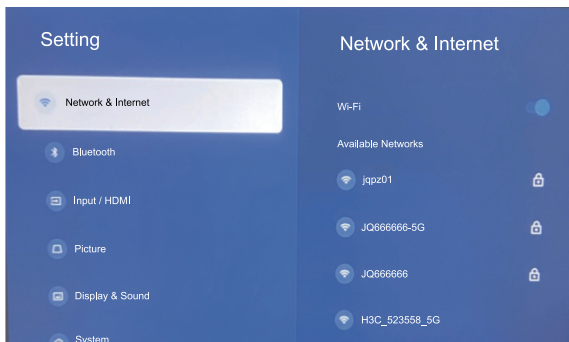

Projector Settings


Auto Focus Settings

 Auto focus allows the projector to automatically adjust the focus as you move it, ensuring a clear image without manual adjustments.

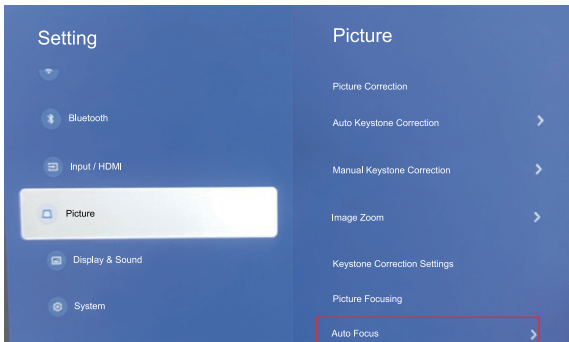

Keystone Correction

 
Select "Auto Keystone Correction" and choose "On," and the projector will automatically perform trapezoidal correction. If you prefer to manually adjust, select "Manual Keystone Correction" for personalized adjustments.

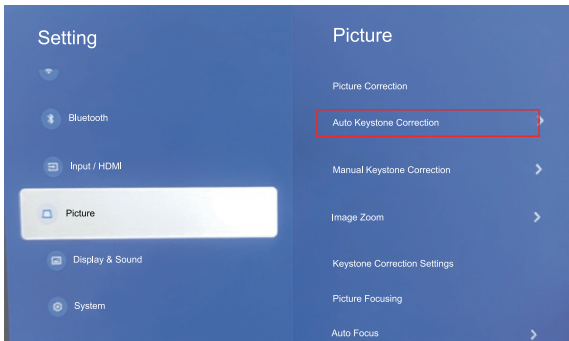

Projector Settings


Please set options related to "Settings" on this screen

 1. Click "Menu" on the remote control to move to the settings menu.
2. Use Left and Right on the remote control to move to Settings.

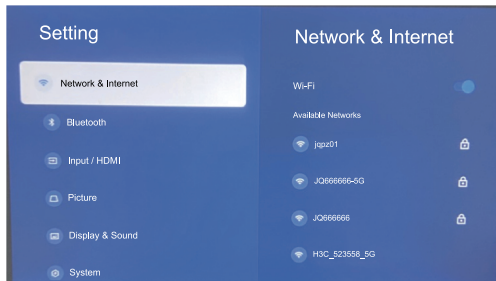

Language Settings

 
1. Set the language on your system (there are 23 languages). The initial setting is English.
2. Use " \wedge / \vee / \langle / \rangle " on the projector or remote control to search for the language.

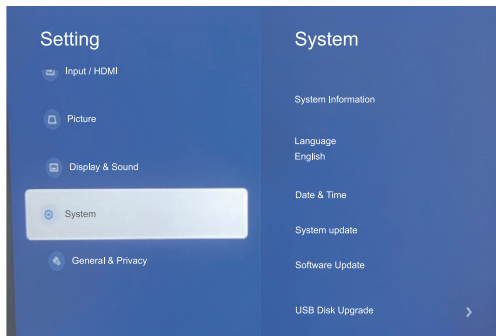

Projector Settings


Projection Mode Settings

 Adjust the image upside down. You can get the desired image by clicking the "OK" key.

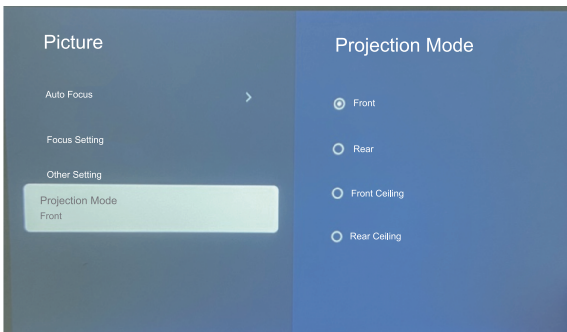

Restore Factory

 Access the settings page, then choose and click on "System." Afterward, select "Restore Factory Settings" to reset to the original factory settings.

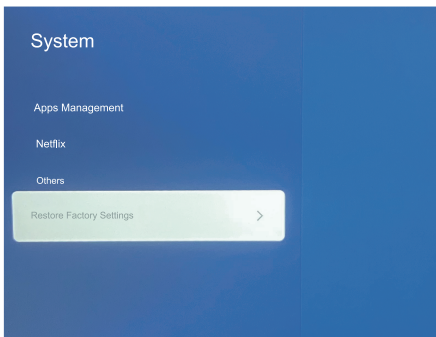

TOP SERVICE:

Any questions about this item, please

 US: 1-888-965-5888

 US: service@happrunlife.com

